


Demb Saucer Flip-it!

Demb Flash Products 59 Louise Rd. Belmont, MA 02478 617 484 3059 info@dembflashproducts.com www.dembflashproducts.com

For all hot-shoe flashes * 1.25 ounces * Pop the top to form the 'dish' * No-glue stretch band



The Saucer on the flash

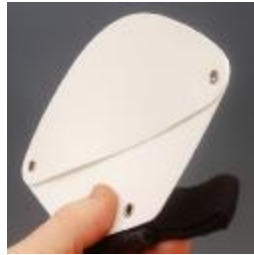

Folded for packing



(optional) front diffuser sticks on with Velcro tabs



Center the Saucer on your flash with your left hand



Grasp the front of the stretch strap with the fingers of your right hand.



Pull forward and over the front of the flash.



To remove, flick the front of the strap up.

If the strap is too tight or loose, remove the strap and change the start position on the hook Velcro section.



Non-ceiling situations, medium distance: Set the Saucer forward.



Ceiling situations, or non ceiling close-ups: Set the Saucer back to skim the top only.



For use on the Nikon SB400 flash, 1/4" spacing from the flash lens.