


Demb Saucer Flip-it!

Demb Flash Products 59 Louise Rd. Belmont, MA 02478 617 484 3059 info@dembflashproducts.com www.dembflashproducts.com

For all hot-shoe flashes * 1.25 ounces * Pop the top to form the 'dish' * No-glue stretch band



The Saucer on the flash

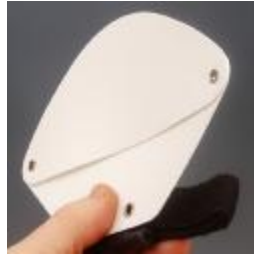

Folded for packing



(optional) front diffuser sticks on with Velcro tabs



Adjusting the strap. The strap is adjustable and should be set to hold firmly, but not so tight as to make putting it on a struggle. Try putting it on as is. If it is OK, you may snip off the extra end. If it is not, pull the stretch Velcro off the right side and reset it to the correct tightness on your flash. When you are satisfied that you like the tightness, you may snip off the extra end.



Installation: Center the Saucer on your flash with your left hand



Grasp the front of the stretch strap with the fingers of your right hand.



Pull forward and over the front of the flash.



To remove, flick the front of the strap up.



Non-ceiling situations, medium distance: Set the Saucer forward.



Ceiling situations, or non ceiling close-ups: Set the Saucer back to skim the top only.



For use on the Nikon SB400 flash, 1/4" spacing from the flash lens.